

# Sierra Wireless® LX40 Quick Start Guide



This guide provides instructions for quickly getting your Sierra Wireless® AirLink® LX40 router configured and connected. For more information refer to the:


- AirLink LX40 Hardware User Guide
- AirLink LX40 Software Configuration Guide

Both are available for download from the Sierra Wireless web site ([source.sierrawireless.com](http://source.sierrawireless.com)).

**NOTE:** Remote ACEmanager access is disabled by default for security. If required, enable it remotely using AirLink Management Service (ALMS) or locally using ACEmanager (Services > ACEmanager) and change the default password (Admin > Change Password).

## STEP 1 Install the SIM Card


1. Remove the SIM card cover. Press the tab with a screwdriver while sliding the cover upwards.
2. Orient the SIM card as shown (with the gold contacts facing down).
3. Gently slide the SIM card into the slot until it clicks into place.
4. Re-attach the cover.

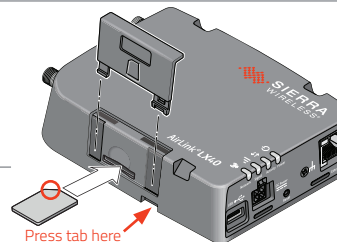

## STEP 2 Connect and Turn On the Router

**NOTE:** If you want to configure all your routers at the same time using ALMS, follow the instructions on page 2 to register your routers before applying power.

Sierra Wireless strongly recommends that you always ground the chassis using the grounding point shown below. For more information, refer to the LX40 Hardware User Guide.

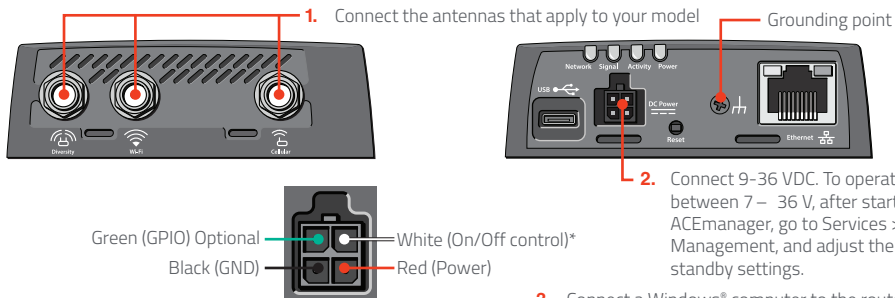

\* To operate the router, the white wire must be connected to 7–36 VDC



---

## STEP 3 Connect to the Network

When the router is powered on, a green LED chase may occur. This indicates that the radio module is being configured for your SIM card. The process can take 6–7 minutes.

Once the router's radio module is configured for the SIM card, it begins the activation/provisioning process and attempts to connect to the mobile network. This process typically takes 5–10 minutes. A successful connection is indicated by a solid green Network LED. If the router does not automatically connect to the network, refer to the AirLink LX40 Software Configuration Guide (WAN/Cellular chapter).

---

## STEP 4 Connect to ACEmanager™

1. On a Windows computer connected to the LX40, enter **http://192.168.13.31:9191** in the web browser. The ACEmanager login screen appears.
2. The administrator user name is entered by default. Enter the default password (printed on the label on the base of the unit) and click Login. The Status > Home screen appears.  
**NOTE: For system security, please change the default password as soon as possible.**
3. Check the Network State field. It should read Network Ready, which indicates the router is connected to the network. If not, see STEP 3 Connect to the Network. For more information on configuring your router, refer to the AirLink LX40 Software Configuration Guide.

---

## STEP 5 Connect to AirLink Management Service (Optional)

You can remotely configure and monitor all your routers at the same time with ALMS.

**NOTE:** An ALMS account is required.

1. Using a web browser, log into your ALMS account. If you don't have an ALMS account, visit [www.sierrawireless.com/ALMS](http://www.sierrawireless.com/ALMS) for information on setting one up.
2. If you have not already done so, register your routers by following the instructions on the registration page.
3. Apply power to all your routers. ALMS completes the registration on power up. You are now ready to use ALMS to configure your routers.

## Sierra Wireless Contact Information

**Sales information and technical support, including warranty and returns**

Web: [sierrawireless.com/company/contact-us](http://sierrawireless.com/company/contact-us)  
Global toll-free number: 1-877-687-7795

**Corporate and product information**

Web: [sierrawireless.com](http://sierrawireless.com)